


MK-4000 CONCRETE SAW SERIES OWNER'S MANUAL

<u>MODELS</u>	<u>PART #</u>
MK-4020KB	167420-20
MK-4026KB	167420-26
MK-4030KB	167420-30
MK-4036KB	167420-36

<u>MODELS</u>	<u>PART #</u>
MK-4020KGB	167420-20G
MK-4026KGB	167420-26G
MK-4030KGB	167420-30G
MK-4036KGB	167420-36G

DIESEL
SINGLE SPEED
THREE SPEED

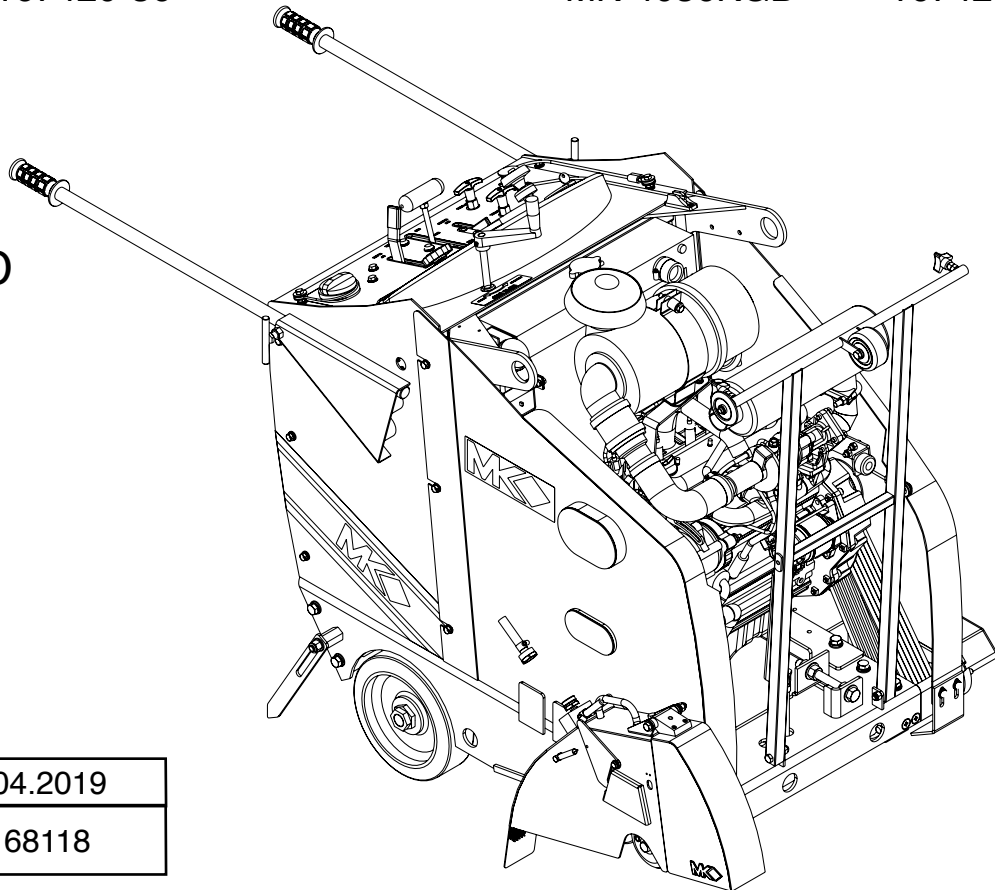

Revision 112	04.2019
Manual Part No. 168118	

Caution: Read all safety and operating instructions before using this equipment. This owner's manual **MUST** accompany the equipment at all times.

INTRODUCTION

Congratulations on your purchase of a MK-4000 Concrete Saw. We are certain that you will be pleased with your purchase. MK Diamond takes pride in producing the finest construction power tools and diamond blades in the industry.

Operated correctly, your MK-4000 Concrete Saw should provide you with years of service. In order to help you, we have included this manual. This owners manual contains information necessary to operate and maintain your MK-4000 Concrete Saw safely and correctly. Please take the time to familiarize yourself with the MK-4000 Concrete Saw by reading and reviewing this manual.

Read and follow all safety, operating and maintenance instructions.

If you should have questions concerning your MK-4000 Concrete Saw, please feel free to call our friendly customer service department at: 800 421-5830

Regards,

MK Diamond

NOTE THIS INFORMATION FOR FUTURE USE:

MODEL NUMBER:	
SERIAL NUMBER:	
PURCHASE PLACE:	
PURCHASE DATE:	

WARRANTY: For your (1) one year warranty to be effective, complete the online Product Registration as soon as possible. Visit www.mkdiamond.com/registration/

TABLE OF CONTENTS


SAFETY	PAGE NO.
Safety Message/Alert Symbols	5
Safety Warnings	6
Rules for Safe Operation & Transportation	7-8
Operation & Safety Decals	9
Safety Decal Locations	10-11
Console Controls	12
Console Control Descriptions	13
PRODUCT SPECIFICATIONS	
Specifications	14-15
Saw Features	15
Model Specifications	15
Instructions for Changing Blade Speed	16
Single Speed	17
Gear Box	17
INSPECTION & START-UP	
Pre-Operation Checklist, Belt & Powerband	18
Schedule Maintenance Quick Reference	19
OPERATION	
Blade Mounting Instructions	20-21
Starting Engine, Starting Instructions	22
Saw Guide Alignment and Adjustment, Pointer Alignment	23
Maneuvering the Saw, Dry Cutting, Wet Cutting, Speed Control-Lever Use and Adjustment	24
Engaging the Drive Unit, Water Hook Up	25
Depth Indicator and Depth Stop	26
MAINTENANCE	
Engine, Air Cleaner, Arbor, Axle, Drive Unit, & Hydrostatic Drive Unit	27
Maintenance Schedule	28
Troubleshooting	29
GENERAL PRODUCT INFORMATION	
Ordering, Return & Packaging	30
Contact Information and Limited Warranty	31

Safety precautions should be followed at all times when operating this equipment. Failure to read and understand the Safety Precaution and Operating Instructions could result in injury to yourself and others.

This Operation Manual has been developed to provide complete instructions for the safe and efficient operation of the MK-4000 Concrete Saw.

Before using this saw, ensure that the person operating the equipment has read and understands all instructions in this manual.

SAFETY MESSAGE / ALERT SYMBOLS

A safety message alerts you to potential hazards that could hurt you or others. Each safety message is preceded by a safety alert symbol () and one of three words: **DANGER**, **WARNING**, or **CAUTION**.

DANGER

You **WILL** be **KILLED** or **SERIOUSLY INJURED** if you do not follow directions.

WARNING

You **CAN** be **KILLED** or **SERIOUSLY INJURED** if you do not follow directions.

CAUTION

You **CAN** be **INJURED** if you do not follow directions. It may also be used to alert against unsafe practices.

Each message tells you what the hazard is, what can happen, and what you can do to avoid or reduce injury. Other important messages are preceded by the word **NOTICE**.

NOTICE

You can cause **PROPERTY DAMAGE** to your machine if you don't follow directions.

The safety labels should be periodically inspected and cleaned by the user to maintain good legibility at a safe viewing distance. If the label is worn, damaged or illegible, it should be replaced. Contact MK Diamond or your dealer for replacement.

SILICA DUST WARNING

Grinding/cutting/drilling of masonry, concrete, metal and other materials with silica in their composition may give off dust or mists containing crystalline silica. Silica is a basic component of sand, quartz, brick clay, granite and numerous other minerals and rocks. Repeated and/or substantial inhalation of airborne crystalline silica can cause serious or fatal respiratory diseases, including silicosis. In addition, California and some other authorities have listed respirable crystalline silica as a substance known to cause cancer. When cutting such materials, always follow respiratory precautions.

CALIFORNIA PROPOSITION 65 MESSAGE

Some dust created by power sanding, sawing, grinding, drilling, and other construction activities contain chemicals known (to the State of California) to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are:

- Lead, from lead-based paints
- Crystalline silica, from bricks and cement and other masonry products
- Arsenic and chromium, from chemically treated lumber

For further information, consult the following sources:

<http://www.osha.gov/dsg/topics/silicacrystalline/index.html>

<http://www.cdc.gov/niosh/docs/96-112/>

<http://oehha.ca.gov/prop65/law/P65law72003.html>

<http://www.dir.ca.gov/Title8/sub4.html>

<http://www.P65warnings.ca.gov>

Your risk from these exposures varies depending on how often you do this type of work. To reduce your exposure to these chemicals, work in a well-ventilated area, and work with approved safety equipment, such as dust masks that are specially designed to filter out microscopic particles. Where use of a dust extraction device is possible, it should be used. To achieve a high level of dust collection, use an industrial HEPA vacuum cleaner. Observe OSHA 29 CFR part 1926.57 and 1926.103.

RULES FOR SAFE OPERATION



DANGER

Failure to follow instructions in this manual may lead to serious injury or even death! This equipment is to be operated by trained and qualified personnel only! This equipment is for industrial use only.

The following safety guidelines should always be used when operating the MK-4000 Concrete Saw.

MAINTENANCE SAFETY

- **NEVER** lubricate components or attempt service on a running machine.
- Keep the machinery in proper running condition. Clean the machine after each day's use. Follow instructions for changing accessories. Inspect tool periodically and, if damaged, have repaired by authorized service facility.

SET UP & TRANSPORTATION SAFETY

- **ALWAYS** use caution and follow the instructions when lifting and transporting this machine.
- **ALWAYS** tie down the machine when transporting. **DO NOT** tow this machine behind a vehicle.
- **NEVER** transport with the blade mounted on the machine.
- Lift only from the lift bail.

GENERAL SAFETY



- **DO NOT** operate or service this equipment before reading this entire manual. Read and understand all warnings, instructions and controls on the machine.

- This equipment should not be operated by persons under 18 years of age.



- **NEVER** operate this equipment without proper protective clothing, shatterproof glasses, steel-toed boots and other protective devices required by the job.

- **NEVER** operate this equipment when not feeling well due to fatigue, illness or taking medicine.
- **NEVER** operate this equipment under the influence of drugs or alcohol.
- Whenever necessary, replace nameplate, operation and safety decals when they become difficult to read.
- **ALWAYS** check the machine for loose bolts before starting.



- **ALWAYS** wear proper respiratory, head, ear and eye protection equipment when operating this machine.

- **ALWAYS** store equipment properly when it is not being used. Equipment should be stored in a clean, dry location out of the reach of children.



- **NEVER** leave the machine unattended. Turn off machine when unattended. Know how to stop the machine quickly in case of emergency.
- **NEVER** try to stop a moving blade with your hand.
- **NEVER** use a wet blade without adequate water supply to the blade.
- **CAUTION** must be observed while servicing the machine. Rotating parts can cause injury if contacted. Have all service performed by competent service personnel.
- Operate this machine only in well ventilated areas. **ALWAYS** ensure that the machine is on level ground before using.



- **NEVER** operate this machine in an explosive atmosphere.
- Establish a training program and give a copy of this manual to operators of this equipment. If you need extra copies, call TOLL-FREE (800) 421-5830.

SAW BLADE SAFETY

For complete safety information, refer to ANSI Safety Code B7.1 available through the American National Standards Institute.



- **ALWAYS** keep area around the machine clear of obstructions and clear the work area of unnecessary people. Keep all body parts away from the blade and all other moving parts.



- Before starting the machine, check that all guards are in position and correctly fitted. **NEVER** allow blade exposure from the guard to be more than 180 degrees. **DO NOT** operate this machine with any guard removed.

- Inspect the blade, flanges and shafts for damage before installing the blade. **NEVER** use damaged or worn blade flanges.
- The blade shaft flanges must be of proper diameter for the size blade being used.
- Inspect the blade, flanges and size shown for each blade size. **DO NOT** exceed maximum blade speed shown, as excessive speed could result in blade breakage. Use **ONLY** blades marked with a maximum operating speed greater than the blade shaft speed. Verify speed and saw drive configuration by checking blade shaft RPM and pulley diameters and blade flange diameters.
- Use the correct blade for the type of work being done. Use only reinforced abrasive blades or steel center diamond blades and flanges supplied with the saw or manufactured for use on concrete saws. **DO NOT** use carbide-tipped blades. Check with the blade manufacturer if you do not know if blade is correct.
- Make sure the blade and flanges are clean and free of dirt and debris before mounting the blade on the saw. Verify the blade arbor hole matches the machine spindle before mounting the blade. **ALWAYS** mount the blade solidly and firmly. Wrench tighten the arbor nut.

- Make sure the blade is not contacting anything before starting the engine.
- **ALWAYS** cut in a straight line. **DO NOT** cut deeper than 1" per pass with a dry blade. Step cut to achieve deeper cuts. **NEVER** cock, jam wedge or twist the blade in a cut. **DO NOT** grind on the side of the blade.



- **DO NOT** touch a dry cutting blade immediately after use. These blades require several minutes to cool after each cut. **DO NOT** use a blade that has been overheated (Core has a bluish color).

FUELING SAFETY



- **ALWAYS** use caution when handling fuel. Shut off the engine and allow to cool before refueling.
- Move the machine at least 10 feet (3 meters) from the fueling point before starting the engine and make sure the gas cap is on the machine and the fuel can is properly tightened.

OPERATION & SAFETY DECALS

The MK-4000 is equipped with a number of safety decals provided for operator safety and maintenance information. Should any of these decals become unreadable, replacements can be obtained by calling (800) 262-1575.

A

Part # 164202

C

Part # 155587 (3)

D

Part # 155585

E

Part # 155580

F

Part # 154399

G

Part # 155038

H

Part # 155579

I

Part # 155588

J

Part # 170773

L

Part # 170480

N

Part # 155578

O
Console Label Part # 167218

B

M

K

WARNING: This equipment contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. These chemicals are contained in various components, fluids and paint, including but not limited to, fuel, oil, electric motors and batteries. In addition, gasoline/diesel powered equipment emits engine exhaust and fumes, and when serviced, cleaned or maintained generate used oil, waste fluids, fumes, grease, grime and particulates from component wear and silica dust which contain chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

For more information go to www.P65Warnings.ca.gov.

P


WARNING: Breathing diesel engine exhaust exposes you to chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

- Always start and operate the engine in a well-ventilated area.
- If in an enclosed area, vent the exhaust to the outside.
- Do not modify or tamper with the exhaust system.
- Do not idle the engine except as necessary.

For more information go to www.P65Warnings.ca.gov/diesel.

Part # 172639
Diesel Only Saws

SAFETY DECAL LOCATIONS

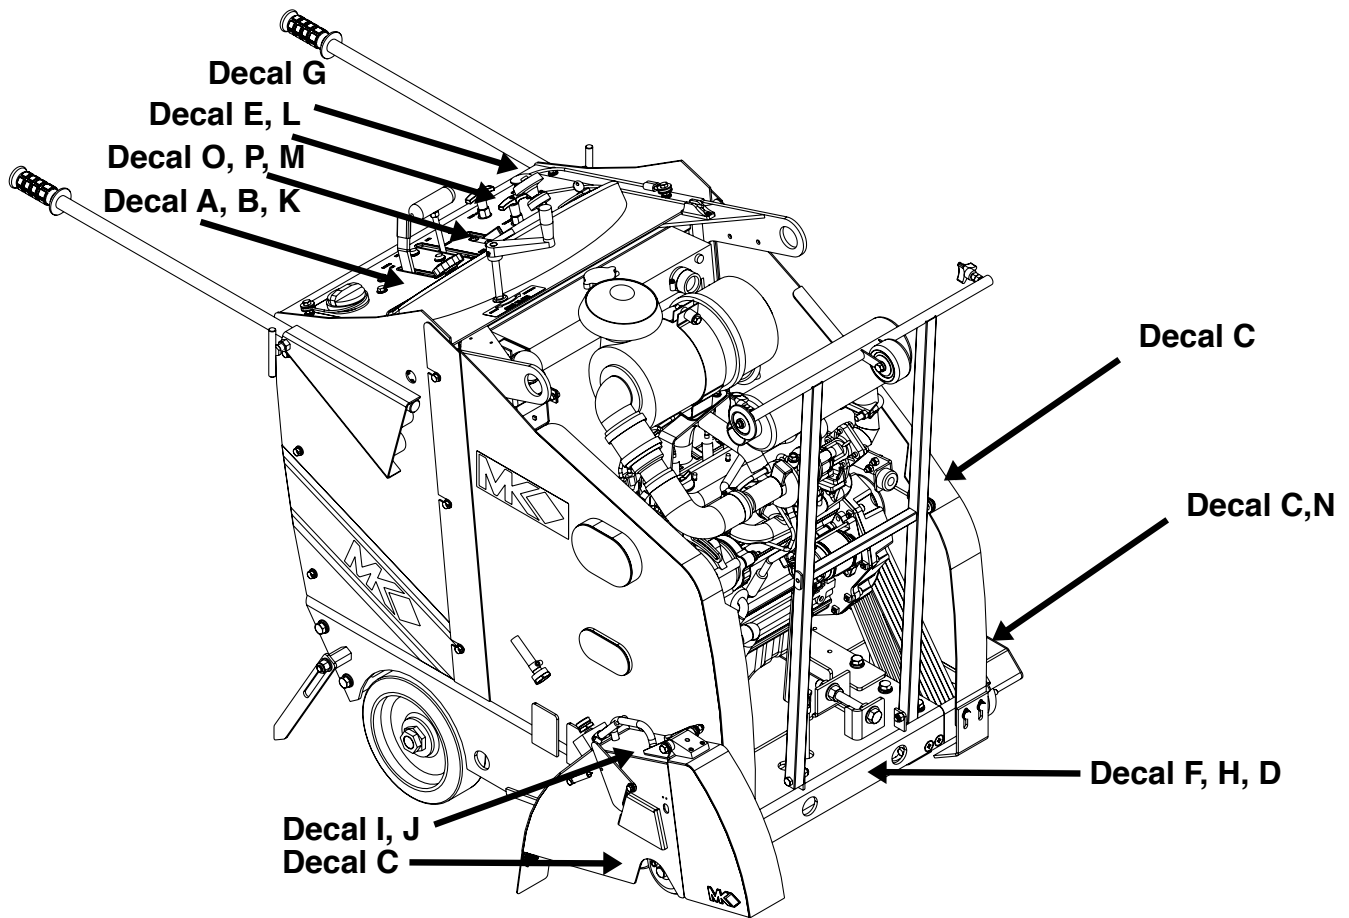


MK-4000 Safety Decal Locations

Decal	Location	Description
A	Console	Warning -Silica
B	Console	Caution - Read Manual
C	Belt Guard/Blade Guard/ Shaft Cover	Caution Guard in Place
D	Frame - Front	Caution Hands & Feet
E	Console	Warning - Do Not Overfill Tank
F	Frame - Front	Notice - Overtension of the Belts
G	Console	Service/Warranty
H	Frame - Front	Accidental Start
I	Blade Guard	Replace Blade Guard
J	Blade Guard	Blade Direction
K	Console	Warning - Prop 65
L	Console	QR Code For Manuals
M	Console	Danger - Lethal Exhaust
N	Belt Guard	Caution - Do Not Touch
O	Console	Machinery Hazard
P	Console	Prop 65 Diesel Only Saws

CONSOLE CONTROLS

The following is a list of console controls elements:

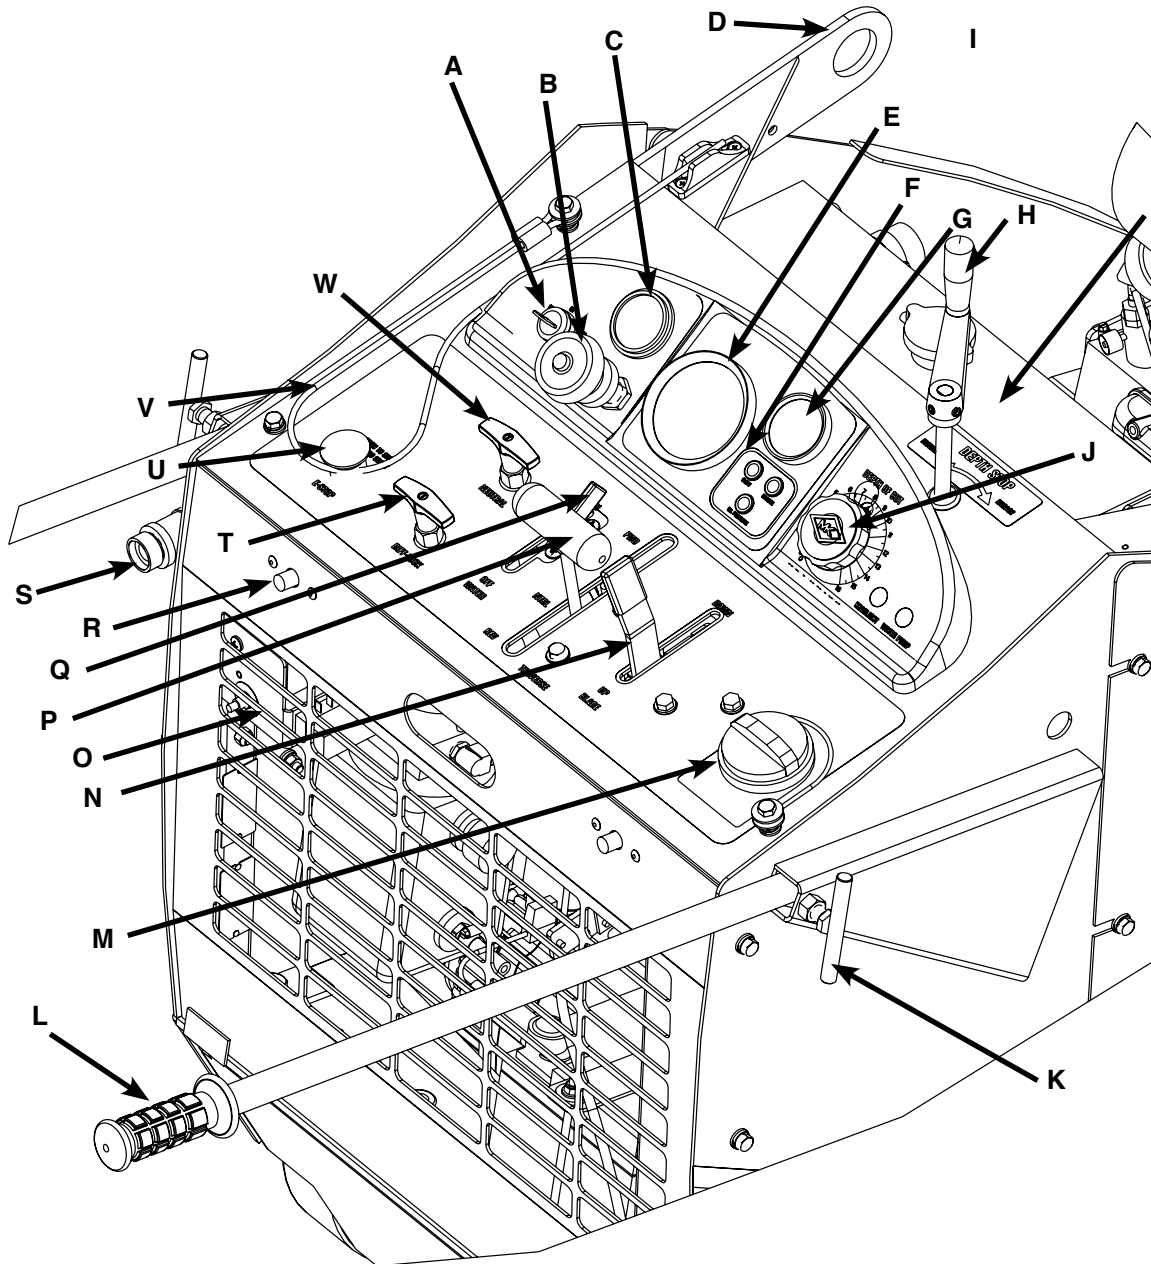

Kubota

CONSOLE CONTROL DESCRIPTIONS

Kubota Console

Decal	Name	Function
A	Ignition Switch	Use to start engine (Glow-OFF-ON-START).
B	Engine Throttle	Controls engine speed.
C	Engine Temp Gauge	Shows temperature of engine.
D	Lifting Points	Used to lift saw.
E	Engine Tachometer	Shows the engine RPM's.
F	Indicator Lights	Indication of Oil Pressure, Charge and Glow Plug.
G	Fuel Gauge	Shows the level of fuel in the fuel tank.
H	Depth Stop	Sets the depth stop for repetitive cuts at the same depth.
I	Radiator	Filled with engine coolant
J	Depth Indicator	Displays cutting depth.
K	T-Handle Knob	Use to tighten operator grip handles.
L	Handle Grip	For operator gripping.
M	Fuel Tank Fill	Fill the fuel tank at this location.
N	Raise/Lower Handle	Controls raising and lowering of blade.
O	Temp Gauge Reset	Must be reset after overheat condition
P	FNR Handle	Used to set direction of saw (Forward/Neutral/Reverse).
Q	Water Valve Lever	Controls water flow to blade guard.
R	Back Panel Knob	1/4 Turn Fastener to remove back.
S	Water Inlet	Hook-up for standard water hose.
T	Turn-To-Lock, Locker	Locks Transmission differential.
U	E-Stop	Stops down engine in an emergency!
V	Point Lift Cable	Allows operator to lift pointer.
W	Neutral Engagement Handle	Engages Transmission, Turn-To-Lock.

MK-4000 SERIES


PRODUCT SPECIFICATIONS

	MK-4020KB	MK-4026KB	MK-4030KB	MK-4036KB
Part #	167420-20	167420-26	167420-30	167420-36
Blade Guard Capacity	20"	26" (660mm)	30" (762mm)	36" (914mm)
Max. Depth of Cut	7-1/2" (191mm)	10-1/2" (267mm)	12-1/2" (318mm)	15" (381mm)
Blade Flange Diameter	4" (102mm)	5" (127mm)	5" (127mm)	6" (152mm)
Blade Shaft RPM	2,200	1,900	1,650	1,350
Arbor Size	1" (25mm)	1" (25mm)	1" (25mm)	1" (25mm)
	MK-4020KBG	MK-4026KBG	MK-4030KBG	MK-4036KBG
Part #	167420-20G	167420-26G	167420-30G	167420-36G
Blade Guard Capacity	20"	26" (660mm)	30" (762mm)	36" (914mm)
Max. Depth of Cut	7-1/2" (191mm)	10-1/2" (267mm)	12-1/2" (318mm)	15" (381mm)
Blade Flange Diameter	4" (102mm)	5" (127mm)	5" (127mm)	6" (152mm)
Blade Shaft RPM*	1300/ 2000 /3000	1300 /2000/3000	1300 /2000/3000	1300 /2000/3000
Arbor Size	1" (25mm)	1" (25mm)	1" (25mm)	1" (25mm)
TECHNICAL SPECIFICATIONS				
Blade Shaft Diameter	1-5/8" (41mm)			
Blade Shaft Bearings	Oil Bath			
Blade Shaft Drive	One Seven Rib Powerband			
Blade Guard Attachment	Quick Detach Bayonet			
Blade Control	Electro-Hydraulic			
Axle - Front	1" (25mm)			
Axle - Rear	1" (25mm)			
Wheels - Front	6" x 2-1/2" x 1" (152 x 64 x 25mm)			
Wheels - Rear	10" x 3" x 1" (254 x 77 x 25mm)			
Handle Bars/Adjustment Length	32-1/2" (826mm)			
Transmission	Eaton Hydrostatic			
Rear End/Differential	Differential			
Control	Forward/Reverse Control, Engage/Disengaged Controls and Differential Lock			
Speed	0-222 FPM (Forward) 0-100 FPM (Reverse)			
Chassis	Heavy Duty jig-welded box frame			
Power Source	Diesel Turbo Charged			
Engine Type	Kubota			
Specifications	V1505-T-E3B-KEA-1			
Maximum Horsepower**	44Hp (32.8kw)			
Displacement	91.4 cu in. (1,4498.1cc)			
Bore	3.07" (78mm)			
Stroke	3.09" (78.4mm)			
Cylinders	4 Cylinder			
Fuel Capacity	6 Gal (23 liter)			
Oil Capacity	7.08 Qt. (6.7 liter)			
Air Filter	Three Stage Dual Element Radial Seal			
Starter	Electric			
Engine Cooling	Liquid			


*Bold blade shaft RPM indicates correct speed for model listed above

**Engine power ratings are calculated by the individual engine manufacturer and the rating method may vary among engine manufacturers. MK Diamond Products makes no claim, representation or warranty as to the power rating of the engine on this equipment and disclaims any responsibility or liability of any kind whatsoever with respect to the accuracy or the engine power rating. Users are advised to consult the engine manufacturer's owners manual and website for specific information regarding the engine power rating.

SAW DIMENSIONS

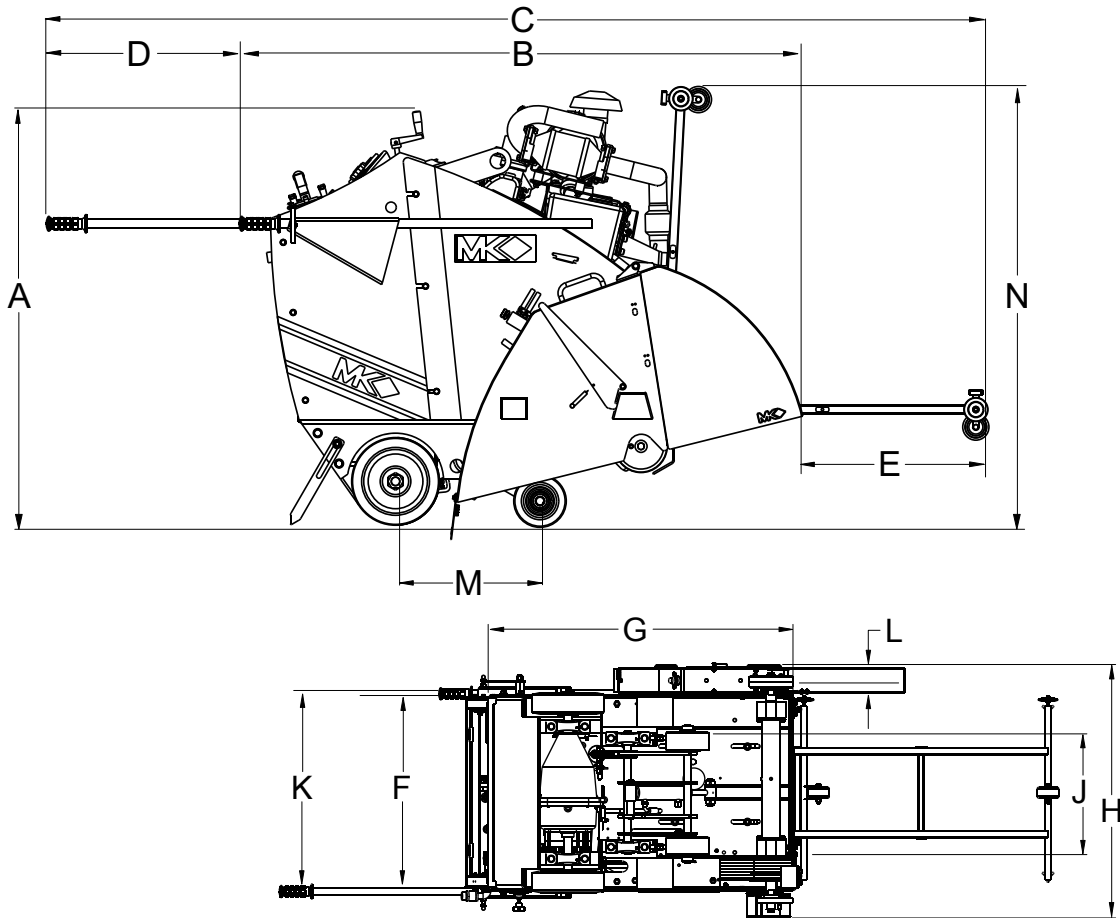

Item	Description	Inches	(mm)
A	Height	50"	(1,270)
B	Minimum Saw Length	64-1/4"	(1,632)
C	Maximum Overall Length	107-1/2"	(2,731)
D	Handle Extension	22"	(559)
E	Maximum Pointer Extension	21-1/4"	(540)
F	Frame Width	27"	(686)
G	Frame Length	42"	(1,067)
H	Saw Width	34-3/4"	(863)
J	Outside to Outside Wheel Width - Front	17"	(432)
K	Outside to Outside Wheel Width - Rear	27-1/2"	(699)
L	Blade to Wall	2-1/4"	(57)
M	Wheel Base Length	16-1/2"	(419)
N	Maximum Overall Height (Pointer Up)	50"	(1,270)

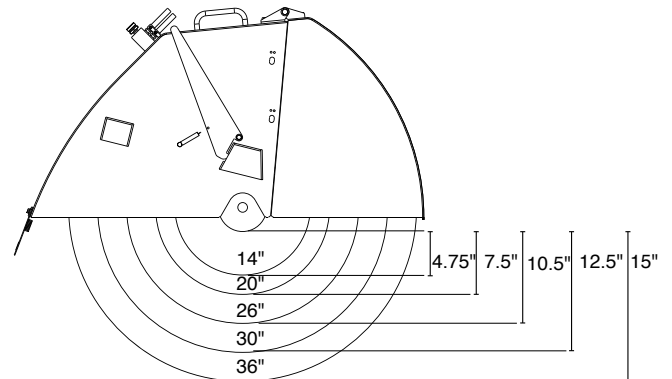

Depth of Cut - All Saws available with 20", 26", 30" and 36" blade guards.

INSTRUCTIONS FOR CHANGING BLADE SPEED

**WARNING**

Do not exceed blade shaft speed shown for each blade size. Excessive blade speed could result in blade failure and serious personal injury.

**NOTICE**

Changing Blade Guard size **MUST** be accompanied by changing Pulleys to achieve the correct blade speed. See Parts Manual for Blade Guard Kits.

Kit Size	Blade Shaft Speed (Engine RPM = 2800)	Blade Speed (FPM)
20"	2,200 RPM	14" = 8000 16" = 9100 18" = 10250 20" = 11400
26"	1,900 RPM	18" = 8950 20" = 9950 22" = 10950 24" = 11950 26" = 12950
30"	1,650 RPM	26" = 11250 28" = 12100 30" = 12950
36"	1,350 RPM	30" = 10700 32" = 11400 34" = 12150 36" = 12850

**NOTICE**

As shown on the chart, some blade guards accept more than one size blade.

BLADE GUARDS AND BLADE SIZES	
BLADE GUARD	BLADE SIZE THAT CAN BE USED WITH BLADE GUARD
20"	18" up to 20"
26"	20" up to 26"
30"	26" up to 30"
36"	30" up to 36"

INSTRUCTIONS FOR CHANGING BLADE SPEED FOR THREE SPEED SAWS**DANGER!**

Turn off saw before changing gears. Engage the E-Stop button for additional safety.


**CAUTION**

Never shift the Gearbox with the engine running. Only shift the Gearbox with the engine OFF. Gearbox damage could occur.

NOTE: The engine speed on this saw does not need to be changed from the factory set speed. The maximum RPM should be 3000, no load.

The 3-speed gearbox provides correct blade speed for different blade sizes. Determine gearbox speed based on the chart below.

Selected Gear	Blade Diameter/ Blade Guard	RPM
High	12" - 16"	3000
Medium	18" - 26"	2000
Low	30" - 36"	1300

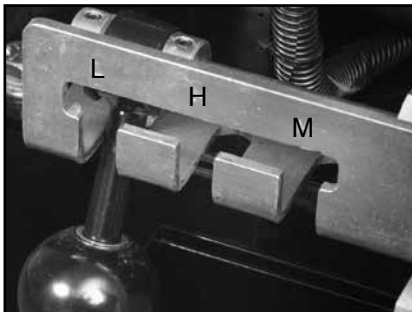


Gears are indicated by "L",
"M", and "H"


NOTE: Gears are not sequential. High speed is in middle position.



Move lever up to unlock gears

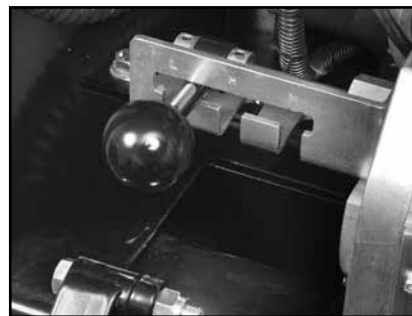

Place level in desired position

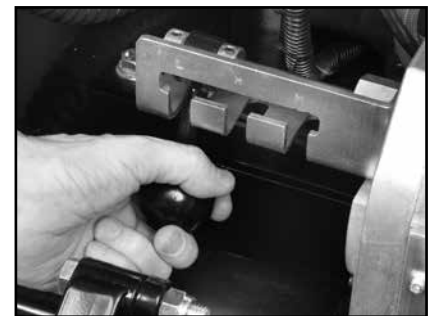

Move level all the way down to
lock in gear selection

NOTE: Blade may need to be rotated slightly so gears align and lever slides to desired position/gear.

BELT AND POWERBAND INSPECTION AND TENSION ADJUSTMENT

The MK-4000 is designed with a transmission belt and a 7 rib powerband. The transmission belt and powerband should be inspected, adjusted and/or replaced periodically. Inspect the belt and powerband daily for cracks, fraying, separation and wear.

Powerband Tension



Check powerband tension by applying pressure by pushing down firmly with finger in the middle of the belt; approximately 1/8" deflection is correct.

To Tension Powerband



Loosen 4 bolts on the two retaining caps so gearbox can rotate




Loosen locknut on tension bar




Apply tension to belt by turning tension screw clockwise, increasing tension

When correct tension has been obtained, retighten locknut and retaining caps. Replace belt guard.

Transmission Belt Tension

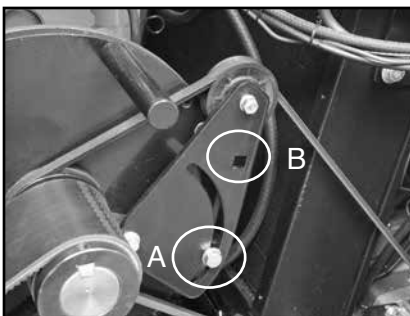

A. Lock Nut
B. Breaker arm hole

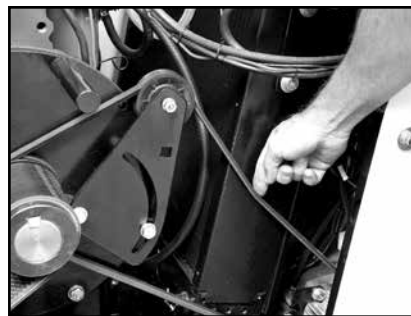

Check transmission belt tension by applying pressure by pushing down firmly with finger in the middle of the belt; approximately 3/8" deflection is correct.



To Tension Belt: Loosen locknut on tension arm. Apply tension with 1/2" drive breaker bar.

Retighten locknut and check deflection is correct. Replace belt guard.

PRE-OPERATION CHECKLIST

WARNING

Before leaving our factory, every machine is thoroughly tested. Follow instructions strictly and your machine will give you long service in normal operating conditions.



Before starting up the machine, make sure you read this entire Operation Manual and are familiar with the operation of the machine.

Machine Cold

1. Check engine oil. See Engine Owner's Manual for type and quantity.
2. Connect battery cables.
3. Check hydrostatic transmission fluid level.
4. Test hydraulic operations. Raise and lower.
5. Check the engine air cleaner.

SCHEDULE MAINTENANCE QUICK REFERENCE

1-2 Hour Operation Checklist

WARNING

ALWAYS locate machine on a level surface with the engine "OFF" and the ignition switch set in the "OFF" position before performing any maintenance. Let the machine cool down prior to any service.

1. Check the engine air cleaner hose clamps. Tighten as required.
2. Tension the blade drive V-belts. **DO NOT** overtension.

WARNING

Before performing any maintenance, **ALWAYS** locate machine on a level surface with the engine "OFF" and the ignition switch set in the "OFF" position.

Service Daily

1. Check engine oil level.
2. Check blade guard for damage.
3. Check hoses and clamps for damage or looseness. Tighten or replace as necessary.
4. Check air cleaner for restriction. Replace air filters at regular intervals.

Interval Service

See the Maintenance Schedule Table on Page 27.


**NOTICE**

Before mounting the blade, machine should be turned "OFF". Clean the blade collars and stub shaft.

BLADE MOUNTING INSTRUCTIONS

1. Remove Blade Guard.


- A. Unscrew the hose fitting to disconnect hose.
- B. Hold the Blade Guard by the handle. Release the inner latch.
- C. Pull the guard up and off the Saw.

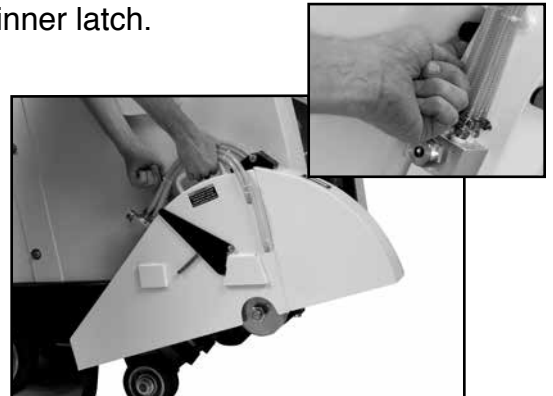**Unscrew Hose Fitting****Release Inner Latch**

2. Remove arbor bolt. If blade is mounted on right side saw, the bolt has left hand threads. To remove, turn clockwise. If the blade is mounted on left side of saw, bolt has right hand threads. To remove, turn counter-clockwise.
3. Pull off outer flange.



**Remove Arbor Bolt****Pull Off Outer Flange**

4. Install new blade.
5. Slide in the outer flange in place.

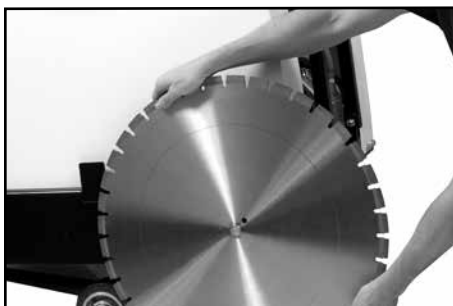**Install New Blade****Slide Outer Flange and Arbor bolt in place**

BLADE MOUNTING INSTRUCTIONS

6. Tighten the arbor bolt.
7. Install the blade guard in place. Make sure that the guard locks in place and connect the hose.

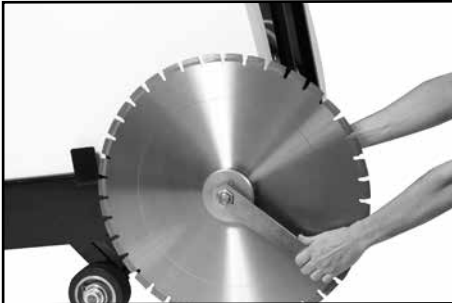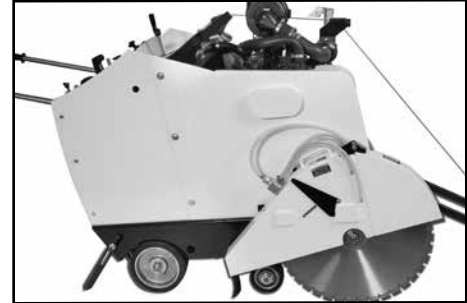**Tighten Arbor Bolt****Install Blade Guard****! WARNING**

Observe the rotation arrow on blade and **DO NOT** exceed maximum RPM stamped on the blade. To set proper RPM, consult the Blade Guards and Blade Sizes Table on page 16.

! NOTICE

To meet ANSI safety standards, larger diameter blade flanges are required for large diameter blades. Information is available upon request or for complete safety information refer to ANSI Safety Code B7.1

! NOTICE

We recommend the use of MK Diamond blades with this saw.

! CAUTION

Diamond Blades improperly used are dangerous. Comply with American National Standards Institute Safety Code, B7.1 and, Occupational Safety and Health Act covering Speed, Safety Guards, Flanges, Mounting Procedures, General Operating Rules, Handling, Storage and General Machine Conditions.

STARTING ENGINE

 **NOTICE**

Read the engine instructions manual before starting.

 **WARNING**

Be sure blade is unobstructed and not resting on ground.

 **WARNING**

Be sure hands and feet are clear of blade.

1. Check engine oil. Add oil if low.
2. Check fuel level. Add fuel if low.
3. Check cooling air intake areas and external surfaces of engine. Make sure surfaces are clean and unobstructed.
4. Check that air cleaner components and all shrouds, equipment covers and guards are in place and securely fastened.

STARTING INSTRUCTIONS

1. Place FNR Handle in **NEUTRAL**.
2. Verify Neutral Engagement Handle is down, in **NEUTRAL**.
3. Pull Engine Throttle Handle out half-way (Kubota only).
4. Start engine by rotating Ignition Switch to the right.

 **NOTICE**

DO NOT crank engine for more than 30 seconds at a time. If engine fails to start, wait about 2 minutes between cranking periods to prevent starter from overheating.

 **NOTICE**

Allow engine to warm up at least 3 minutes before applying load.

5. When engine is warm, throttle may be used out to maximum position.
6. To stop engine, push throttle to idle, rotate ignition switch to "OFF" position.

 **NOTICE**

If the engine has been running hard and is hot, do not shut engine off abruptly. Cool engine by removing load and allowing engine to run idle for 3 to 5 minutes.

SAW GUIDE ALIGNMENT AND ADJUSTMENT**WARNING**

This operation is performed with the engine "OFF"!

The front and rear pointers are set in line at the factory. However, the pointers should be checked for proper alignment with the blade after every use. The following are the procedures for aligning the pointers with the blade, with the engine shut off.

1. Using a straight edge, carefully mark a line 12 feet long on a smooth level concrete surface.
2. Place the saw parallel to the line. Lower the blade and center it over the line.
3. **FRONT:** With the blade centered over the line and the saw frame parallel to the line, lower the front pointer assembly and position the pointer over the line.
4. **REAR:** With the blade centered over the line and the saw frame parallel to the line, loosen the pointer and adjust up or down and ensure that it touches the line.
5. Finally, roll the saw along the entire length of the line. The saw should lead off no more than 6 inches to the left in 12 feet of forward travel. Adjust the pointer in or out if the lead-off is outside this parameter.
6. Secure hardware.

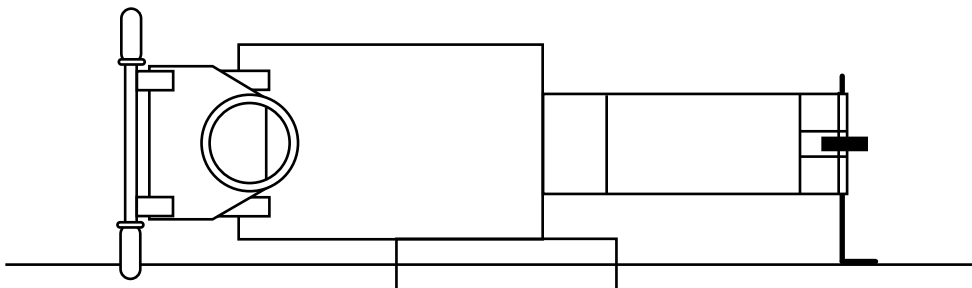


Fig. 17 Pointer Alignment

MANEUVERING THE SAW



WARNING

The blade is spinning whenever the saw is running. Raise the blade as high as possible when maneuvering so that the blade will not strike the pavement.

DRY CUTTING

Dry cutting blades have been specially designed for use with concrete saws. Ensure that the blade you are using is clearly marked for dry cutting.

When dry cutting, it is important to keep the air filter clean. Check the condition of the filter at least every four (4) hours of operation. Clean the pre-filter (wash in soapy water and re-oil) and change the paper filters as soon as it becomes clogged. Concrete dust is very abrasive and will quickly damage internal engine parts, causing loss of compression and eventual engine failure.

Saw only as deep as the specifications and job conditions require. Remember airflow helps to cool the blade during dry cutting. Cutting too deep with one pass, or exerting excessive forward or side pressure can be dangerous. Step cut in increments of 1 inch (25 mm) or less, for the best results.

If reinforced abrasive blades are used for cured concrete, it is usually better to saw only 1 inch deep per pass. If deeper cuts are required, cut in multiple passes.

Thinner Diamond Blades are especially advantageous when cutting dry.

WET CUTTING

The water used on the blade is to provide coolant during cutting and to flush the concrete cutting from the cut.

FNR HANDLE

The FNR Handle moves the saw forward by pushing the lever away from the operator and moves the saw in reverse by pulling the lever toward the operator. The further you push this lever, the faster the saw travels.



WARNING

Before starting the engine, place this lever in **NEUTRAL**.

RAISE/LOWER HANDLE

The raise/lower handle controls the depth of the blade. When pulled back, the electric/hydraulic pump will raise the blade out of the cut. When pushed forward the blade will lower. The lowering speed is faster, the farther forward the lever is pressed.


ENGAGING THE DRIVE UNIT

This saw is driven by a hydrostatic transmission. To engage the transmission, **PULL** the Neutral Engagement Handle up and turn to either direction to lock.



NOTICE

DO NOT engage the unit unless FNR Handle is on **NEUTRAL**.

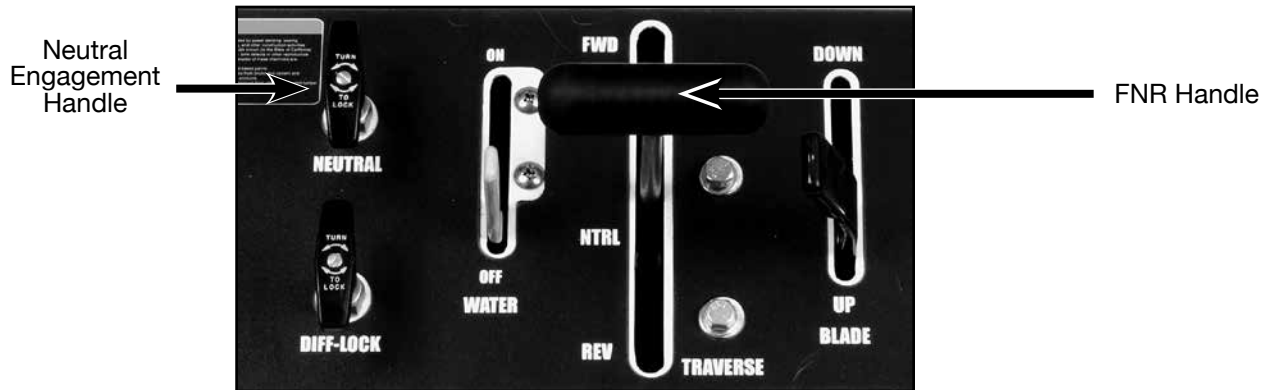

Engage transmission

To disengage the transmission, twist the Neutral Engagement Handle to unlock, and **PUSH** down.

WATER HOOK UP

Prior to starting the engine, you should hook up the water hose to the Water Inlet and visually inspect it to make sure that water is flowing to the blade. Hook up the hose to the unit and turn on the water source. Open the water valve.



NOTICE

Water flow volume can be metered by opening the water valve partially.

Next, lift the front of the blade guard and visually inspect the make sure water is flowing out of each of the tubes. If any of the holes are blocked, flush impurities from the tube.



Water Hook Up

DEPTH INDICATOR AND DEPTH STOP

The saw is equipped with a Depth Indicator and a Depth Stop. The Depth Indicator tells you approximately how deep you are in the cut. To set the indicator, you need to first lower the blade until it is just touching the ground and then rotate the Depth Indicator knob to 0.

The Depth Stop is used for several cuts at the same depth. It is set by finding the desired depth and then turning the knob until it is tight. This will prevent cutting below the "locked" level to provide a consistent depth with every cut.



STEP CUTTING

1. Follow general instructions outlined in the section Operating the Saw pages 20.
2. When deep sawing (more than 4") or concrete with hard aggregate, sawing to full depth in several cuts should be made in incremental steps of 1-1/2 to 2 inches until the desired depth of cut is reached. In softer aggregates or asphalt, it may be possible to saw full depth in two passes.
3. Gradually move the speed control lever forward to increase the cutting speed. If the blade stalls in the cut (which can happen when deep sawing) immediately raise blade from cut. If not done at once, the belts will spin freely and burn. Check belts for proper tension and continue sawing at a slower rate of speed.
4. On final pass, lower the blade until it hits the sub-base (sandy color will appear in the water being discharged from the cut). Raise blade approximately 1/2" from bottom. The sand and gravel particles of the sub-base may cause premature wear or damage to the saw blade.
5. It is common, on the final pass of the cut, for pavement to wedge blade, particularly on a hot day. When this happens, immediately stop engine. If the blade is wedged, remove the Blade Shaft Bolt and Outside Collar and move the saw away from the blade. To remove a wedged blade from the concrete, use a jack hammer and carefully chip out concrete around the blade. (Pounding or twisting the blade may cause severe damage).
6. Go slowly with a new blade until it "opens up" that is, until you can see and feel the diamonds.
7. Small corrections can be made by leaning on handles.
Deep sawing is very hard on saws and blades. Experienced operators soon get a "feel" for the saw and are constantly on guard to slow down when they hit excessive steel or hard aggregate.

ENGINE

The operation and life of the engine depends on proper maintenance. Do not start engine until engine pre-check is complete. The engine pre-check consists of checking the oil, fuel level, air filter and greasing the wheel, axle, drive unit and arbor bearings. Basic engine maintenance is shown in Maintenance Schedule Table on the next page. For more detailed information, please refer to the Engine Operator Maintenance Manual and Warranty provided with the saw.

NOTICE

When breaking-in a new saw, we recommend running the engine for one hour with no load prior to actual use on the job.

AIR CLEANER

Due to the dusty conditions created by sawing, it is essential to check the engine air cleaner element daily. Remove the element and shake out the accumulated dust and dirt. Wipe out dirt from the inside cover and from the housing. Check the engine manual for washing instructions. Stocking replacement filters is strongly recommended.

ARBOR, AXLE, DRIVE UNIT AND WHEEL BEARINGS

Bearings should be greased according to the Maintenance Schedule Table on the next page.


WARNING

DO NOT inspect when the engine is running.

Use of high quality detergent oil of API (American Petroleum Institute) service class SF or SG. Select the viscosity based on the air temperature at the time of operation. For temperatures below 0°F, 5W-20 or 5W-30 oil is recommended. For temperatures above 0°, 10W-30 or 10W-40 oil is recommended. Check your engine manual for other recommendations.

HYDROSTATIC DRIVE UNIT WITH TRANSMISSION GEARBOX & BLADE SHAFT GEARBOX

The fluid shipped in your hydrostatic transmission is a fluid having a viscosity equivalent to SAE 20W20. Mobil fluid 300 or any other oil equivalent to SAE 20W20 is preferred by Eaton Transmission. The expansion tank (Marker A) is marked for proper fluid level. It should be checked when unit is cold. **DO NOT** allow the unit to run low on oil. If the unit is low, you can add oil by removing the cap (Marker B). Remove plug (marker C) and fill transmission gearbox with 80-90 SAE Gear Oil to lower edge of fill hole. Remove plug (marker D) and fill Blade Shaft gearbox with 80-90 SAE gear oil to lower edge of fill hole.

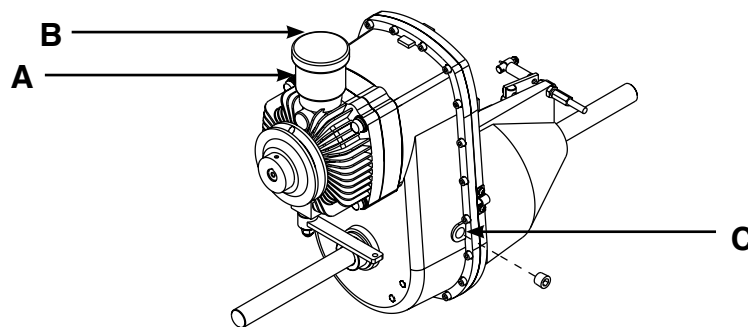

Expansion Tank and Cap

MAINTENANCE SCHEDULE

MAINTENANCE SCHEDULE	DAILY	25 HOURS	50 HOURS	250 HOURS
Check Engine Oil Level	•			
Check Air Filter	•			
Check Air Intake, Clean if Necessary	•			
Grease Rear Wheel Pillow Blocks		•		
Grease Front Wheel Bearings		•		
Check Drive Transmission Oil, Add if Low		•		
Check Raise/Lower Power Unit Fluid, Add if Low		•		
Change Engine Oil		•		
Check Bladeshift Gearbox Oil, Add if Low			•	
Service Air Cleaner Element			•	
Change Engine Oil Filter			•	
Check Engine Compression				•
Inspect Fuel Filter, Replace if Dirty				•
Inspect Spark Plugs and Ignition System				•
Inspect Cooling System and Clean				•
Inspect Starting Motor				•

TROUBLESHOOTING

When trouble occurs, be sure to check the simple causes which, at first, may seem too obvious to be considered. Refer to the table below for problems and their possible causes.

TRANSMISSION	Cause	Loose Transmission Linkage	Oil Level	Cooling Fan	Water in Oil Reservoir	Dirty Cooling Fans	Loose Drive Chain
	Problem						
	Transmission jerky when starting	X	X				X
	Transmission operates in one direction	X					
	Transmission operating hot	X	X	X		X	
	Oil color is black			X		X	
	Oil color is milky				X		

ENGINE	Cause	No Fuel	Improper Fuel	Dirt in Fuel Line	Fuse Burned Out	Incorrect Oil Level	Dirty Air Filter	Faulty Spark Plugs
	Problem							
	Will not start	X		X	X		X	X
	Hard starting	X	X	X			X	X
	Stops suddenly	X		X		X	X	
	Lacks power		X	X		X	X	X
	Operates erratically		X	X			X	X
	Knocks or pings		X					X
	Skips or misfires			X			X	X
	Back fires			X			X	X
	Overheats			X			X	X
	High Fuel Consumption						X	X

OTHER	Cause	Improper Blade for the Application	Improper Belt Tension	Damage Caused by External Objects
	Problem			
	Reduced blade life	X	X	
	Excessive belt wear		X	X

ORDERING INFORMATION

You may order MK Diamond products through your local MK Diamond distributor or, you may order direct from MK Diamond.

When ordering direct from MK Diamond, please have the following information ready before calling:

- The Model Number of the saw
- The Serial Number of the saw
- Where the saw was purchased and when
- The Part Number for the part(s) being ordered
- The Part Description for the part(s) being ordered

NOTE: Standard orders are \$50.00 or more when ordering direct from MK Diamond. A \$6.00 charge will be added to orders having a net billing value under \$50.00. A nominal handling fee of \$5.00 may apply to some orders.

All parts may be ordered by calling toll free to – 800 421-5830 or 310 539-5221 and asking for Customer Service. For technical questions, call – 800 474-5594.

RETURN MATERIALS POLICY

To expedite the service relative to the return of a product purchased through MK Diamond, please observe the following:

NOTE: When returning all items, they must have been purchased within the previous twelve (12) months.

- Have the Model Number of the saw
- Have the Serial Number of the saw
- Have the location of where the saw was purchased
- Have the date when the saw was purchased
- Contact Customer Service for approval to return the item(s)
- Obtain a Returned Goods Number (RGA) authorizing the return
- Follow the packaging instructions in the following section
- Ensure the RGA number is on the outside of the returned package
- Ensure your item(s) are prepaid to the destination

For returned items, call toll free to – 800 421-5830 or 310 539-5221 and ask for Customer Service.

PACKAGING INSTRUCTIONS

- Remove the Cutting Head and Support Angle Assembly
- Dry the saw before shipping
- When packing, include the following: MK-4000 and Guard Blade (Other Accessories are not required)
- Package the unit in its original container or one of comparable size (do not ship the unit partially exposed)
- Ensure all parts are secured in the packaging to prevent moving

AUTHORIZED SERVICE CENTERS

For quicker repair time, you may contact MK Diamond Customer Service, toll free, at 800 421-5830 or 310 539-5221 for the Authorized Service Center closest to you or visit our web site at www.mkdiamond.com. For technical questions, call – 800 474-5594.

CONTACT

Please contact MK Diamond Products, Inc. Customer Service Department with any questions you might have regarding distributors, parts or service.

Telephone: **(800) 421-5830**

Fax: **(310) 539-5158**

E-mail: **Customer_Service@MKDiamond.com**

Customer Service Hours: **Monday through Friday, 6AM-4PM PST**

MK Diamond Products, Inc.

1315 Storm Parkway

Torrance, CA 90501

MK DIAMOND PRODUCTS, INC. LIMITED WARRANTY

MK DIAMOND PRODUCTS, INC. will guarantee every machine they build, to be free from defects in material and workmanship for (1) one year from date of purchase. The obligation of MK DIAMOND PRODUCTS, INC. under this warranty is limited to the repair or replacement of any parts which, under normal use, prove to be defective in material or workmanship. The parts involved or the unit in question should be returned to MK DIAMOND PRODUCTS, INC. or to a point designated by us, transportation prepaid.

This warranty does not obligate us to bear the cost of labor or transportation charges in connection with replacement or repair of defective parts. Likewise, it shall NOT apply to any unit which has been subjected to misuse, neglect or accident. This warranty does NOT apply to any machine which has been repaired or altered outside our factory.

This warranty does NOT obligate MK DIAMOND PRODUCTS, INC., with respect to items not of our manufacture, such as engines, motors, hydraulics, etc., which are subject to their own guarantees and warranties.

We shall in no event be liable for consequential damages or contingent liabilities arising out of failure of any equipment or parts to operate properly.

WARRANTY: For your (1) one year warranty to be effective, complete the online Product Registration as soon as possible. Visit **www.mkdiamond.com/registration**

© COPYRIGHT 2019, MK DIAMOND PRODUCTS, INC. ALL RIGHTS RESERVED.

The MK Diamond logo is a registered trademark of MK Diamond Products, Inc. and may not be used, reproduced, or altered without written permission. All other trademarks are the property of their respective owners and used with permission.

MK Diamond may have patents, patent applications, trade marks, copyrights of other intellectual property right covering this product in this document.

This manual MUST accompany the equipment at all times. This manual is considered a permanent part of the equipment and should remain with the unit if resold.

The information and specifications included in this publication were in effect at the time of approval for printing.

MODEL MK-4000 SERIES
OWNER'S MANUAL



MK Diamond Products, Inc.

MK Diamond Products, Inc.
1315 Storm Parkway
Torrance, CA 90501

Toll-Free: (800) 421-5830
Phone: (310) 539-5221
Fax: (310) 539-5158
www.mkdiamond.com