




INSTRUCTION SHEET FOR INSTALLATION OF LIFTING BAIL KIT (MK #166784) ON MK CX-3

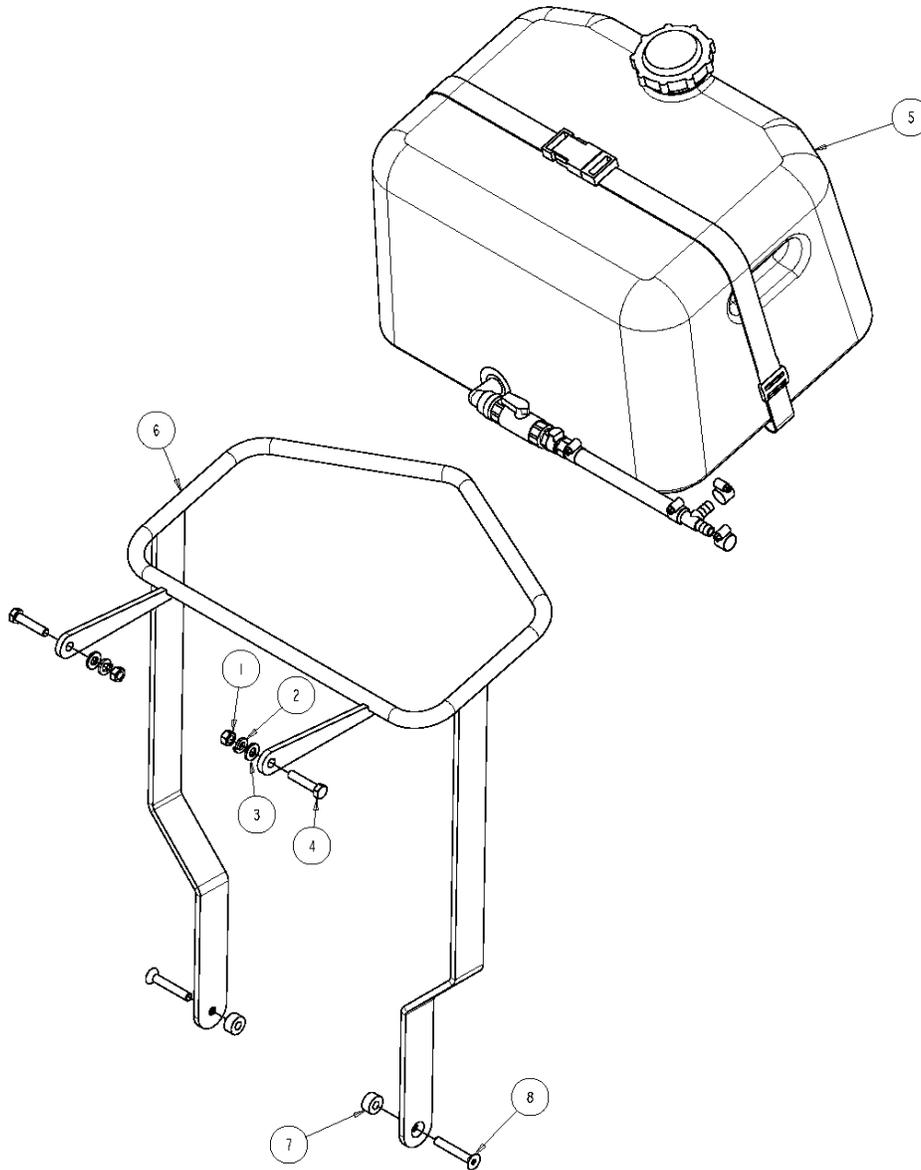

Item	MK Part Number	Quantity	Description
1	101196	2	Nut, Hex, 5/16-18
2	151747	2	Washer, Lock, Split, 5/16
3	151754	2	Washer, Flat, SAE, 5/16
4	152467	2	Screw, Hex Head, 5/16-18 x 1-1/2
5	157852	1	Assy, Water Tank
6	166781	1	Lifting Bail, MK CX-3
7	166782	2	Spacer, 5/16 x 3/4 x 3/8
8	166783	2	Screw, Flat, Hex Socket, 5/16-18 x 2

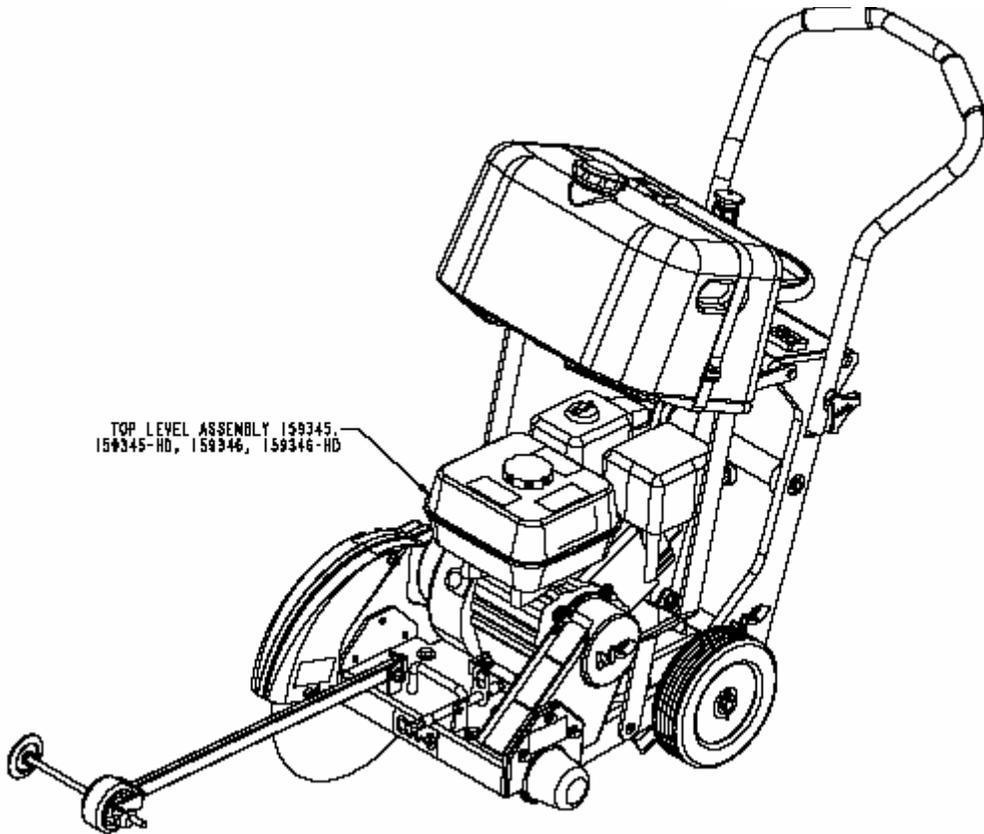

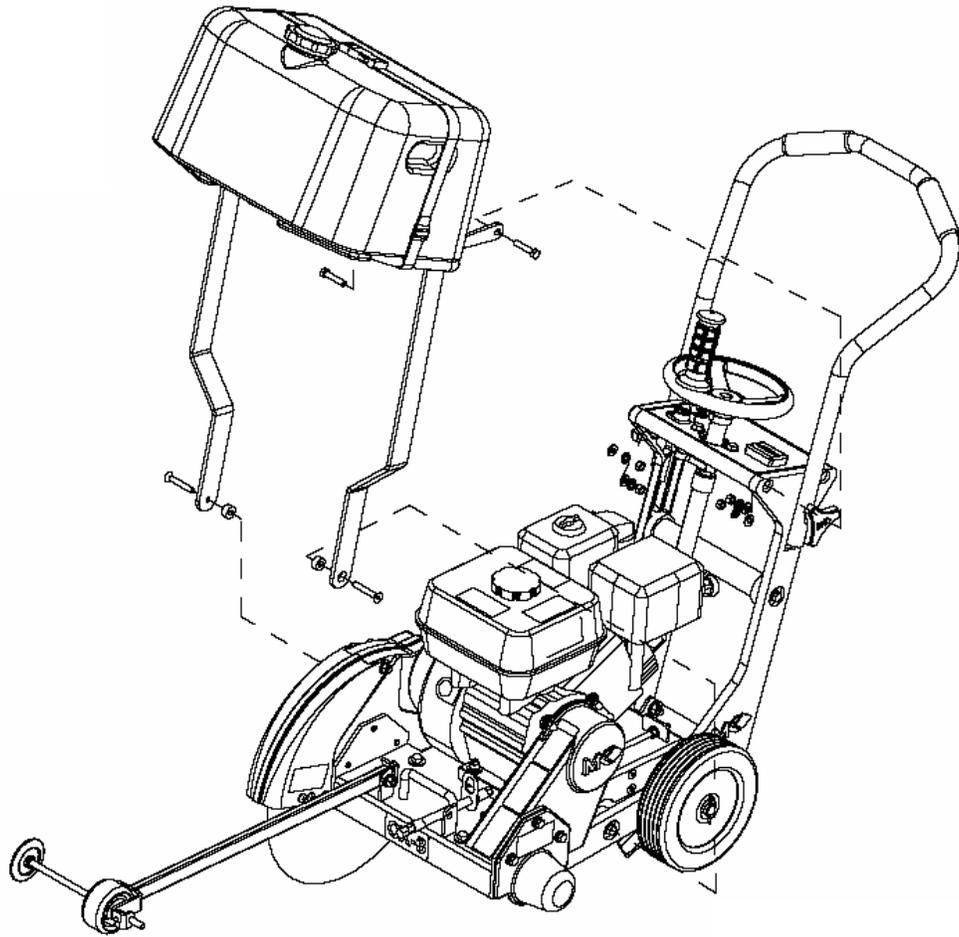

1. Insert block under front of saw frame.



2. Remove tube bolt in front of left wheel.



3. Remove blade guard by removing 3 bolts from inside of guard.



4. Remove tube bolt in front of right wheel.



5. Remove bolt from forward end of control panel on left side of saw.



6. Remove bolt from forward end of control panel on right side of saw.




7. Put lifting bail (Item #5) in position, and using flat head screw (#7) and spacer (#6), screw lower right leg through casting into tubing.



8. Again using flat head screw (#7) and spacer (#6), screw right lower leg of lifting bail (#5) through casting into tubing.



9. Using screw (#4), washer (#3), lock washer (#2) and nut (#1), attach upper tabs of lifting bail to forward holes in casting and control panel.

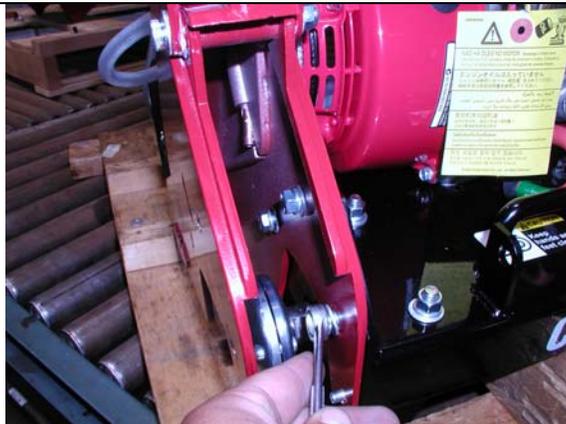

10. Replace blade guard.